



DY9

USER MANUAL

“ THANK YOU FOR CHOOSING A DERYA ARMS PRODUCT ”

THIS BOOKLET WILL GUIDE YOU THROUGH HANDLING YOUR FIREARM SAFELY



PLEASE NOTE: CHANGES MAY BE MADE WITHOUT NOTICE

Your pistol features an innovative and unique design. With regular care and cleaning, your firearm will serve you for a life time. The firearm was manufactured by DERYA ARMS from high quality raw materials and with high-tech CNC machines in our factory.

Please read and understand all the directions and instructions in this Manual to guarantee the best performance and a safe shooting experience. Maintain your firearm properly in accordance with these instructions so it will remain safe, and performs properly.

Always remember that you are using a firearm; always follow all safety rules and be aware that it is your responsibility to share your knowledge, and educate others in the safe use of this firearm.

Before firing a cartridge, learn the parts of your firearm and understand how it operates. Please read this manual carefully and enjoy your firearm safely.

MAINTENANCE INSTRUCTIONS:

1) NEVER MAKE CHANGES OR ALTERATIONS TO YOUR PISTOL

This pistol was built to a proven and tested design, and manufactured with care. It must NEVER be altered or changed. Changing or altering any part of your pistol may result in serious injuries to you or others, and is NOT RECOMMENDED by the manufacturer. Any changes made to the pistol or use of non-factory parts voids the factory warranty.

2) PROPER CARE AND STORAGE

Regular care and cleaning of your firearm is key to its proper functionality and reliability. ALWAYS make sure that the firearm is UNLOADED before you leave the range and check it again before you start the cleaning process.

THE RESPONSIBILITIES OF THE USER

The laws of your country give you the right to possess a hunting firearm. Appreciate and enjoy your rights with care. Be aware that, as an owner of a firearm, you are responsible for ensuring your own safety and that of your shooting partners, observers, and the environment.

DISCLAIMER

This firearm is sold with the understanding that the buyer will obey all applicable domestic laws, therefore Derya Arms is not responsible for death or injuries caused by incorrect or irresponsible use.



DERYA ARMS DOES NOT ACCEPT ANY RESPONSIBILITIES FOR DAMAGE DUE TO THE FOLLOWING CAUSES

- 1) INCORRECT OR IRRESPONSIBLE USE OF THE FIREARM**
- 2) USE OF INCORRECT GAUGE AMMUNITION OR RELOADED, DAMAGED OR IMPROPER CARTRIDGES**
- 3) INSUFFICIENT AND/OR INCORRECT MAINTENANCE OR CLEANING WHICH CAUSES TO DAMAGE OR WEAR**
- 4) SALE CONTRARY TO APPLICABLE LAWS AND REGULATIONS**
- 5) CHANGING OR CONVERSION OF THE FIREARM'S ORIGINAL DESIGN, OPERATING MECHANISM, ACCESSORIES, MAGAZINES OR MECHANICALS**
- 6) CARELESS, DANGEROUS OR CRIMINAL USE**
- 7) USING THE FIREARM WITHOUT FIRST READING, UNDERSTANDING AND FOLLOWING ALL SAFETY RULES**
- 8) ANY OTHER USE OR ACTION THAT IS BEYOND THE DIRECT CONTROL OF THE MANUFACTURER**

IMPORTANT WARNING

- 1) Read the instructions booklet completely before using your firearm.**
- 2) Always be aware of the handling and functional characteristics of your firearms.**
- 3) Always unload your firearm when not in use (remove all cartridges).**

When stored or not in use, firearms should always be unloaded and move the safety lever to the WHITE position to block the trigger of your firearm.

Always remove all cartridges and inspect the chamber to ensure your firearm is unloaded.

- 1) After shooting.**
- 2) Before racking or after picking up the firearm.**
- 3) Before putting the gun into its case.**
- 4) Any time you are not using your firearm.**
- 5) Before handing your gun to anyone else.**
- 4) ALWAYS KEEP YOUR FIREARM POINTED IN A SAFE DIRECTION.** This ensures you do not injure yourself or anyone else.
- 5) ALWAYS STORE YOUR FIREARM OUT OF REACH OF CHILDREN OR OTHER UNAUTHORIZED PEOPLE.** There are many ways of keeping your firearms locked and stored safely and securely. Always secure your firearm in accordance with applicable laws in your area and always unload and then lock the firearm when not in use or whenever it will be unattended.

6) ALWAYS OBEY ALL LAWS REGARDING OWNERSHIP, TRANSPORT, AND SHOOTING YOUR FIREARM. Never point your firearm at a person. Do not harm any person or damage any public property.

7) IF YOUR FIREARM DOES NOT FIRE AFTER PULLING THE TRIGGER: STOP, WAIT A MINUTE, AND USE EXTRA CAUTION WHEN OPENING THE BOLT. If your firearm did not fire after pulling the trigger **STOP!** Keep the firearm pointed in a safe direction, apply the safety by moving the safety lever to the white position. Wait 60 seconds. Carefully open the bolt by pulling the cocking handle and eject the shell in a safe direction. Always remember when you experience a misfire, your firearm is still loaded and could fire at any time (a “hang fire”).

8) ALWAYS TREAT YOUR FIREARM AS IF IT IS LOADED, EVEN WHEN THE SAFETY IS ON. Always keep your finger away from the trigger unless you are on target and prepared to shoot. Never forget that even with safety ON, you are responsible for the direction your firearm is pointing. Do not count on a mechanical device.

9) This firearm was produced under the control and supervision of Derya Arms. The firearm must never be altered. Derya does not recommended the use of any spare parts or accessories and magazines other than those included in the original box or received from Derya. If you need magazines, spare parts or repair, contact our authorized distributor in your country or Derya Arms ONLY.

10) ENSURE THE BARREL IS NOT PLUGGED OR OBSTRUCTED BEFORE YOU LOAD YOUR GUN. The barrel should not have any residue from bore cleaning solvent or oil, or any other foreign material inside the bore, chamber or choke. If the barrel is blocked or otherwise obstructed, even partially, this may cause bulging and/or a breech explosion and/or a split barrel. If you feel a strange recoil or the report sounds unusually loud or soft **STOP SHOOTING IMMEDIATELY** and check the barrel for obstructions and bulges.

NEVER try to clear an obstruction in your barrel by firing another shell!

ANY PARTIAL OR COMPLETE BORE OBSTRUCTION can cause serious injury or death to the shooter or bystanders.

SERIAL NUMBER

The serial number is engraved on the firearm on several places. Every firearm has a unique number. This number is used for legal and warranty matters. Derya suggests that owners note and store the serial numbers of all of your firearms in a secure location away from the firearms.

TECHNICAL SPECIFICATIONS



Model	DY9
Caliber	9x19mm
Action	Semi Automatic
Capacity*	15 Rounds
Affective Range	100 m / 320 ft
Barrel Length*	98.25mm / 3.86"
Overall Barrel Length*	102mm / 4.02"
Overall Length*	175mm / 6.9"
Overall Width	29.5mm / 1.16"
Overall Height	115.9mm / 4.56"
Weight, Empty	670gr / 1.4lb.
Trigger Pull	2900gr / 6.3lb.
Front & Rear Sight	Tenon cut with retaining screw / Fixed
Length of Pull	29.5mm / 3.3"
Rifling Twist	1/10"
No. Of Groves	6
Slide	4140 Steel
Finish	Melonite

* It can varies by country

LOADING THE FIREARM

1) Press the magazine release button to remove the magazine from the pistol.

2) Press down on the follower with the thumb of one hand, and then feed the round into the magazine, tuck each round under the feed lips and then move on.



3) Insert the fully loaded magazine into the pistol grip and ensure it is properly engaged.

4) Grasp the slide serrations with your thumb and index finger, fully retract and release the slide to load the chamber.



SAFETY

A) The trigger safety prevents movement caused by impacts when the firearm is dropped and also prevents accidental movement due to side pressure, obstructions in the trigger guard, or improper finger placement.

B) To fire your pistol, place your index finger properly.



DISASSEMBLY OF THE FIREARM

1) a) Ensure that your pistol is unloaded and pull the trigger and afterward pull back the slide slightly.
b) Pull down the slide lock. Using your other hand, pull down both sides of the slide lock lever. Push the slide forward with your four fingers until it has separated from the receiver of the gun.

2) Pull the slide barrel assembly forward with a locking block, recoil spring, and recoil guide.

3) Slightly press the recoil spring and recoil guide.

4) Lift the recoil guide and recoil spring, letting the latter stretch slowly.

5) Press the locking block plunger.

6) Take out the barrel locking assembly from the slide.
(No further disassembly is recommended unless done by a competent gunsmith.)



BASIC PARTS



P.NO	PART NAME
1	Frame
2	Grip Cap (S)
3	Grip Cap Pin
4	Trigger
5	Trigger Safety Spring
6	Trigger Safety
7	Trigger Safety Pin
8	Trigger Slide
9	Trigger Slide Pin
10	Magazine Release Lever
11	Magazine Release Lever Spring
12	Magwell
13	Magwell Screw
14	Slide Release Lever with Spring
15	Takedown Lever
16	Takedown Lever Spring
17	Locking Block
18	Trigger Pin
19	Locking Block Pin
20	Rear Block
21	Rear Block Pin
22	Trigger Slide Plate
23	Trigger Slide Spring
24	Ejector
25	Slide


P.NO	PART NAME
26	Slide Cover Plate
27	Firing Pin
28	Firing Pin Block
29	Firing Pin Spring
30	Firing Pin Spring Bushing
31	Rear Sight
32	Rear Sight Screw
33	Front sight
34	Front sight Screw
35	Firing Pin Safety
36	Firing Pin Safety Spring
37	Extractor
38	Extractor Pin
39	Extractor Spring
40	Extractor Spring Pin
41	Barrel
42	Recoil Guide with Spring
43	Magazine Body
44	Magazine Follower
45	Magazine Spring
46	Magazine Base Plate Retainer
47	Magazine Base Plate

P.NO	PART NAME
A1	Reddot Slide
A2	Reddot Plate
A3	Reddot Screw
A4	Rear Sight
A5	Rear Sight Screw
A6	Front sight
A7	Front sight Screw
B1	Threaded Barrel
B2	Thread Oring
B3	Thread Protector

Note: Some models will vary from exploded view.

There may be some changes on the user manual. Please use that code to download the latest version of manual.



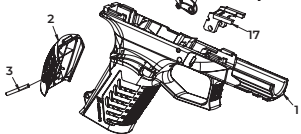

KNOW YOUR FIREARM



While the central tab in the trigger (misleadingly described in the parts list as a "trigger safety") does perform a safety related function, IT IS NOT A TRUE SAFETY, as that term is generally understood, because it will not prevent the pistol from firing if the trigger is pulled. If a finger or foreign object enters the trigger guard and moves sufficiently to the rear, the loaded pistol will fire. Whether the foreign object is a misplaced holster safety strap, a trigger guard retention device as found on some Kydex holsters, a stray shirttail, a lipstick tube, or a Tootsie Roll doesn't matter. Because of that risk, users of this pistol must exercise extreme caution when carrying it fully loaded to prevent objects from entering the trigger guard, particularly when holstering this pistol.

Warranty Certificate

Derya warranty covers its firearms and parts. We offer 2 years Warranty on our products for their intended purpose. As with any product, abuse, gunsmithing by an unqualified person and normal wear and tear are excluded. Additionally, if the firearm was modified and/or repaired by an unqualified gunsmith without permission from DERYA®, the warranty will be void.

DERYA® warrants that the enclosed firearm was originally manufactured free of defects in material, workmanship and mechanical function. DERYA® agrees to correct any defect in the firearm for the original purchaser/importer by repair, adjustment or replacement, at DERYA's option, with the same or comparable quality components (or by replacing the firearms at DERYA's option); provided, however, that the firearm is returned unloaded and the freight prepaid.

This warranty is null and void if the firearm has been misused, damaged (by accident or otherwise), fired with hand loaded, reloaded or improper ammunition, fired with an obstruction in the barrel, damaged through failure to provide reasonable and necessary maintenance as described in the manual accompanying the firearm, or if unauthorized repair or any alteration, including of a cosmetic nature, has been performed on the firearm.

Subject to the foregoing, this warranty confers the right to have the covered firearm or its parts repaired, adjusted or replaced exclusively upon the original purchaser, which right is not transferable to any other person. No implied warranties of any kind are made herein and this warranty does not apply to any accessory items attached or appurtenant to the firearm.

In no event shall DERYA® be liable for any incidental or consequential damages arising from or in connection with this warranty. In the event warranty service is needed, contact the dealer you purchased the firearm from; or the importer/distributor of your country; or DERYA® customer service by mailing to support@deryaarms.com.





Derya Silah San.Ltd.
O.S.B. 41959 Sk.
No:24/1 42700
Konya/Turkey



+90 332 514 8118



support@deryaarms.com



www.deryaarms.com

