



DYPA PUMP ACTION USER MANUAL

“ THANK YOU FOR CHOOSING A DERYA ARMS PRODUCT ”

THIS BOOKLET WILL GUIDE YOU THROUGH HANDLING YOUR RIFLE SAFELY



**PLEASE NOTE: CHANGES MAY BE
MADE WITHOUT NOTICE**

Your rifle features an innovative and unique design. With regular care and cleaning, your rifle will serve you for a life time. The rifle was manufactured by DERYA ARMS from high quality raw materials and with high-tech CNC machines in our factory.

Please read and understand all the directions and instructions in this Manual to guarantee the best performance and a safe shooting experience. Maintain your rifle properly in accordance with these instructions so it will remain safe, and performs properly.

Always remember that you are using a rifle; always follow all safety rules and be aware that it is your responsibility to share your knowledge, and educate others in the safe use of this rifle.

Before firing a cartridge, learn the parts of your rifle and understand how it operates. Please read this manual carefully and enjoy your rifle safely.

MAINTENANCE INSTRUCTIONS:

1) NEVER MAKE CHANGES OR ALTERATIONS TO YOUR RIFLE

This rifle was built to a proven and tested design, and manufactured with care. It must NEVER be altered or changed. Changing or altering any part of your rifle may result in serious injuries to you or others, and is NOT RECOMMENDED by the manufacturer. Any changes made to the rifle or use of non-factory parts voids the factory warranty.

2) PROPER CARE AND STORAGE

Regular care and cleaning of your rifle is key to its proper functionality and reliability. ALWAYS make sure that the rifle is UNLOADED before you leave the range and check it again before you start the cleaning process.

THE RESPONSIBILITIES OF THE USER

The laws of your country give you the right to possess a hunting rifle. Appreciate and enjoy your rights with care. Be aware that, as an owner of a rifle, you are responsible for ensuring your own safety and that of your shooting partners, observers, and the environment.

DISCLAIMER

This rifle is sold with the understanding that the buyer will obey all applicable domestic laws, therefore Derya Arms is not responsible for death or injuries caused by incorrect or irresponsible use.



DERYA ARMS DOES NOT ACCEPT ANY RESPONSIBILITIES FOR DAMAGE DUE TO THE FOLLOWING CAUSES

- 1) INCORRECT OR IRRESPONSIBLE USE OF THE RIFLE**
- 2) USE OF INCORRECT CALIBER AMMUNITION OR RELOADED, DAMAGED OR IMPROPER CARTRIDGES**
- 3) INSUFFICIENT AND/OR INCORRECT MAINTENANCE OR CLEANING WHICH CAUSES TO DAMAGE OR WEAR**
- 4) SALE CONTRARY TO APPLICABLE LAWS AND REGULATIONS**
- 5) CHANGING OR CONVERSION OF THE RIFLE'S ORIGINAL DESIGN, OPERATING MECHANISM, ACCESSORIES, MAGAZINES OR MECHANICALS**
- 6) CARELESS, DANGEROUS OR CRIMINAL USE**
- 7) USING THE RIFLE WITHOUT FIRST READING, UNDERSTANDING AND FOLLOWING ALL SAFETY RULES**
- 8) ANY OTHER USE OR ACTION THAT IS BEYOND THE DIRECT CONTROL OF THE MANUFACTURER**

IMPORTANT WARNING

- 1) Read the instructions booklet completely before using your rifle.**
- 2) Always be aware of the handling and functional characteristics of your rifles.**
- 3) Always unload your rifle when not in use (remove all cartridges).**

When stored or not in use, rifles should always be unloaded and move the safety lever to the SAFE position to block the trigger of your rifle.

Always remove all cartridges and inspect the chamber to ensure your rifle is unloaded.

- 1) After shooting.**
- 2) Before racking or after picking up the rifle.**
- 3) Before putting the gun into its case.**
- 4) Any time you are not using your rifle.**
- 5) Before handing your gun to anyone else.**
- 4) ALWAYS KEEP YOUR RIFLE POINTED IN A SAFE DIRECTION.** This ensures you do not injure yourself or anyone else.
- 5) ALWAYS STORE YOUR RIFLE OUT OF REACH OF CHILDREN OR OTHER UNAUTHORIZED PEOPLE.** There are many ways of keeping your rifles locked and stored safely and securely. Always secure your rifle in accordance with applicable laws in your area and always unload and then lock the rifle when not in use or whenever it will be unattended.

6) ALWAYS OBEY ALL LAWS REGARDING OWNERSHIP, TRANSPORT, AND SHOOTING YOUR RIFLE. Never point your rifle at a person. Do not harm any person or damage any public property.

7) IF YOUR RIFLE DOES NOT FIRE AFTER PULLING THE TRIGGER: STOP, WAIT A MINUTE, AND USE EXTRA CAUTION WHEN OPENING THE BOLT. If your rifle did not fire after pulling the trigger STOP! Keep the rifle pointed in a safe direction, apply the safety by moving the safety lever to the safe position. Wait 60 seconds. Carefully cycle the forend fully rearward to open the action, keep the muzzle pointed in a safe direction, and visually confirm the chamber is empty and the unfired cartridge is safely removed. Always remember when you experience a misfire, your rifle is still loaded and could fire at any time (a "hang fire").

8) ALWAYS TREAT YOUR RIFLE AS IF IT IS LOADED, EVEN WHEN THE SAFETY IS ON. Always keep your finger away from the trigger unless you are on target and prepared to shoot. Never forget that even with safety ON, you are responsible for the direction your rifle is pointing. Do not count on a mechanical device.

9) This rifle was produced under the control and supervision of Derya Arms. The rifle must never be altered. Derya does not recommend the use of any spare parts or accessories and magazines other than those included in the original box or received from Derya. If you need magazines, spare parts or repair, contact our authorized distributor in your country or Derya Arms ONLY.

10) ENSURE THE BARREL IS NOT PLUGGED OR OBSTRUCTED BEFORE YOU LOAD YOUR GUN. The barrel should not have any residue from bore cleaning solvent or oil, or any other foreign material inside the bore, chamber or choke. If the barrel is blocked or otherwise obstructed, even partially, this may cause bulging and/or a breech explosion and/or a split barrel. If you feel a strange recoil or the report sounds unusually loud or soft STOP SHOOTING IMMEDIATELY and check the barrel for obstructions and bulges.

NEVER try to clear an obstruction in your barrel by firing another ammunition!

ANY PARTIAL OR COMPLETE BORE OBSTRUCTION can cause serious injury or death to the shooter or bystanders.

SERIAL NUMBER

The serial number is engraved on the rifle on several places. Every rifle has a unique number. This number is used for legal and warranty matters. Derya suggests that owners note and store the serial numbers of all of your rifles in a secure location away from the rifles.

KEEP THIS CARD FOR YOUR RECORDS

Serial Number _____

Date Of Purchase _____

Place Of Purchase _____



STATE-BY-STATE WARNINGS



CALIFORNIA STATE WARNING

CHILDREN ARE ATTRACTED TO AND CAN OPERATE FIREARMS THAT CAN CAUSE SEVERE INJURIES OR DEATH. PREVENT CHILD ACCESS BY ALWAYS KEEPING FIREARMS LOCKED AWAY AND UNLOADED WHEN NOT IN USE. IF YOU KEEP A LOADED FIREARM WHERE A CHILD OBTAINS AND IMPROPERLY USES IT, YOU MAY BE FINED OR SENT TO PRISON. IT IS UNLAWFUL TO USE A MAGAZINE WITH A CAPACITY OVER 10 ROUNDS.



MASSACHUSETTS STATE WARNING

IT IS UNLAWFUL TO CARRY ANY MAGAZINE OR BELT WHICH HOLDS MORE THAN TEN ROUNDS, UNLESS AUTHORITY IS GRANTED BY THE BOSTON POLICE COMMISSIONER. IT IS UNLAWFUL TO STORE OR KEEP A FIREARM, RIFLE, SHOTGUN OR MACHINE GUN IN ANY PLACE UNLESS THAT WEAPON IS EQUIPPED WITH A TAMPER RESISTANT SAFETY DEVICE OR IS STORED OR KEPT IN A SECURELY LOCKED CONTAINER.



NEW YORK STATE WARNING

IT IS UNLAWFUL TO CARRY ANY MAGAZINE OR BELT WHICH HOLDS MORE THAN SEVEN ROUNDS, UNLESS AUTHORITY IS GRANTED BY THE STATE OF NEW YORK. THE USE OF A LOCKING DEVICE OR SAFETY LOCK IS ONLY ONE ASPECT OF RESPONSIBLE FIREARMS STORAGE FOR INCREASED SAFETY; FIREARMS SHOULD BE STORED UNLOADED AND LOCKED IN A LOCATION THAT IS BOTH SEPARATED FROM THEIR AMMUNITION AND INACCESSIBLE TO CHILDREN AND OTHER UNAUTHORIZED PERSONS.

SAFETY PRECAUTIONS

CHILDREN ARE ATTRACTED TO FIREARMS, AND MIGHT BE ABLE TO OPERATE THEM, THEY CAN CAUSE SEVERE INJURIES AND EVEN DEATH, TO THEMSELVES OR OTHERS. PREVENT CHILDREN FROM ACCESS, ALWAYS KEEP YOUR FIREARMS LOCKED AWAY, UNLOADED AND OUT OF REACH OF CHILDREN WHEN NOT IN USE AT ANY TIME.

THE FIREARM SHOULD BE STORED IN ROOMS WITH A DRY ATMOSPHERE AND MINIMUM HUMIDITY. IT SHOULD NOT BE STORED ENCASED IN LEATHER OR ANYTHING THAT WILL ATTRACT AND HOLD MOISTURE, CAUSING IT TO RUST.

DO ALL PROCEDURES (DISASSEMBLY, CLEANING AND OTHER MAINTENANCE) ONLY WHEN THE FIREARM IS UNLOADED. ENSURE THE MAGAZINE IS REMOVED, THE CHAMBER IS EMPTY, AND THE ACTION IS OPEN, VISUALLY CONFIRM THE CHAMBER AND ACTION ARE CLEAR AFTER CYCLING THE FOREND.

WHEN STORING THE GUN FOR A PROLONGED PERIOD OF TIME, IT IS NECESSARY TO OIL IT HEAVILY WITH AN ACID-FREE LUBRICANT. THE EXTERNAL PARTS MUST BE COATED WITH AN ANTI-RUST OIL OR GREASE TO PREVENT MOISTURE CAUSING THE PARTS TO RUST AND MALFUNCTION. BEFORE USAGE, THE RIFLE MUST BE CLEANED AND WIPED DRY AGAIN.

TECHNICAL SPECIFICATIONS

Model	DYPA-18
Caliber	9x19
Action	Pump Action
Capacity*	15+1 Rounds
Barrel Length	457.2mm / 18" & 500mm / 20"
Overall Length	955mm / 37.55" & 1005mm / 39.5"
Overall Width	40mm / 1.6"
Length of Pull	350mm / 13.7"
Weight, Empty	2,35 kg / 5.00 lb. & 2,40 kg / 5.29 lb
Weight, Loaded	2,40 kg / 5.29 lb. & 2.50 kg / 5.51 lb.
Stock	Synthetic

*Available aftermarket 10rd / 17rd magazines - * It can vary by country

DISASSEMBLY OF THE RIFLE

1) Ensure the rifle is completely unloaded and magazine removed before any disassembly. To remove the magazine, push the magazine release lever forward as shown and pull the magazine downward in the direction indicated by the arrow.

2) To separate the upper and lower receiver, first loosen and remove



the screw securing the barrel and handguard clamp using an Allen key, rotating it in the direction indicated by the arrow.

3) Remove the barrel clamp in the direction indicated by the arrow.

4) Using an Allen key, rotate and remove the front receiver assembly



screw located on the lower receiver in the direction indicated by the arrow.
5) Rotate and remove the rear receiver assembly screw located on the lower receiver in the direction indicated by the arrow.

6) Holding the barrel, lift the upper receiver upward as shown in the image.

7) Hold the upper and lower receiver as shown and separate them from



each other.

8) To remove the bolt assembly, first remove the bolt retaining plate shown in the image. Using an Allen key, rotate and remove the screw in the direction indicated by the arrow. After removing the screw, remove the retaining plate.

9) Hold the bolt assembly as shown and pull it out in the direction indicated by the arrow.

10) Continue pulling the bolt assembly in the direction indicated by the arrow until it is completely removed.

11) To reinstall the bolt assembly, ensure that the lug shown by the upper arrow engages with the slot inside the receiver indicated by the lower arrow.



SAFETY GUIDE



The "safety" is in the on safe position.



The "safety" is in the off safe position.

VERSATILE ATTACHMENT OPTIONS

The 1/2x28 universal thread dimensions allow you to attach any compatible muzzle device accordingly.



DYPA PUMP ACTION PARTS LIST



P.NO	PART NAME
1	Recoil Pad Screw
2	Recoil Pad
3	Buttstock
4	Firing Pin
5	Firing Pin Spring
6	Bolt
7	Firing Pin Pin
8	Extractor Pin
9	Extractor Spring
10	Extractor
11	Bolt Retaining Block
12	Bolt Retaining Block Pin
13	Upper Receiver
14	Rear Sight Screw
15	Rear Sight Pin
16	Barrel Retaining Pin
17	Rear Sight
18	Rear Sight Spring
19	Pin
20	Front Sight Retainin Screw
21	Front Sight
22	Universal Nut
23	Slide Carrier
24	Barrel
25	Lower Receiver
26	Slide Extension
27	Slide Extension Connector
28	Slide Extension Connector Screw
29	Handguard
30	Handguard Screw
31	Magazine
32	Magazine Release Lever
33	Magazine Release Lever Pin

P.NO	PART NAME
34	Magazine Release Lever Spring
35	Ejector
36	Lower Receiver Takedown Screws
37	Ejector Spring
38	Ejector Pin
39	Hammer
40	Hammer Pin Sleeve Male
41	Hammer Pin Sleeve Female
42	Hammer Pin
43	Locking Block Retaining Screw
44	Locking Block
45	Lock
46	Lock Pin
47	Trigger Insert Pin
48	Trigger
49	Trigger Pin
50	Trigger Spring
51	Disconnecter Spring
52	Disconnecter
53	Buttstock Retaining Screw
54	Hammer Spring
55	Trigger Insert
56	Safety
57	Safety Pin
58	Safety Spring


P.NO	PART NAME
59	Safety Screw
A1	Adjustable Stock
A2	Adapter
A3	Flip Up Rear Sight
A4	Flip up Front Sight
A5	Picatinny Rail Screw
A6	Slide Extension Connector
A7	Slide Extension Connector Screw
A8	Picatinny Rail
A9	Adapter Retaining Screw
A10	Grip
A11	Tube Centering Screw
A12	Grip Retaining Screw
A13	Tube
B1	Wood Buttstock
B2	Wood Handguard with M-lok
B3	Wood Standart Handguard

Note:

Some models will vary from exploded view.

There may be some changes on the user manual. Please use that code to download the latest version of manual.



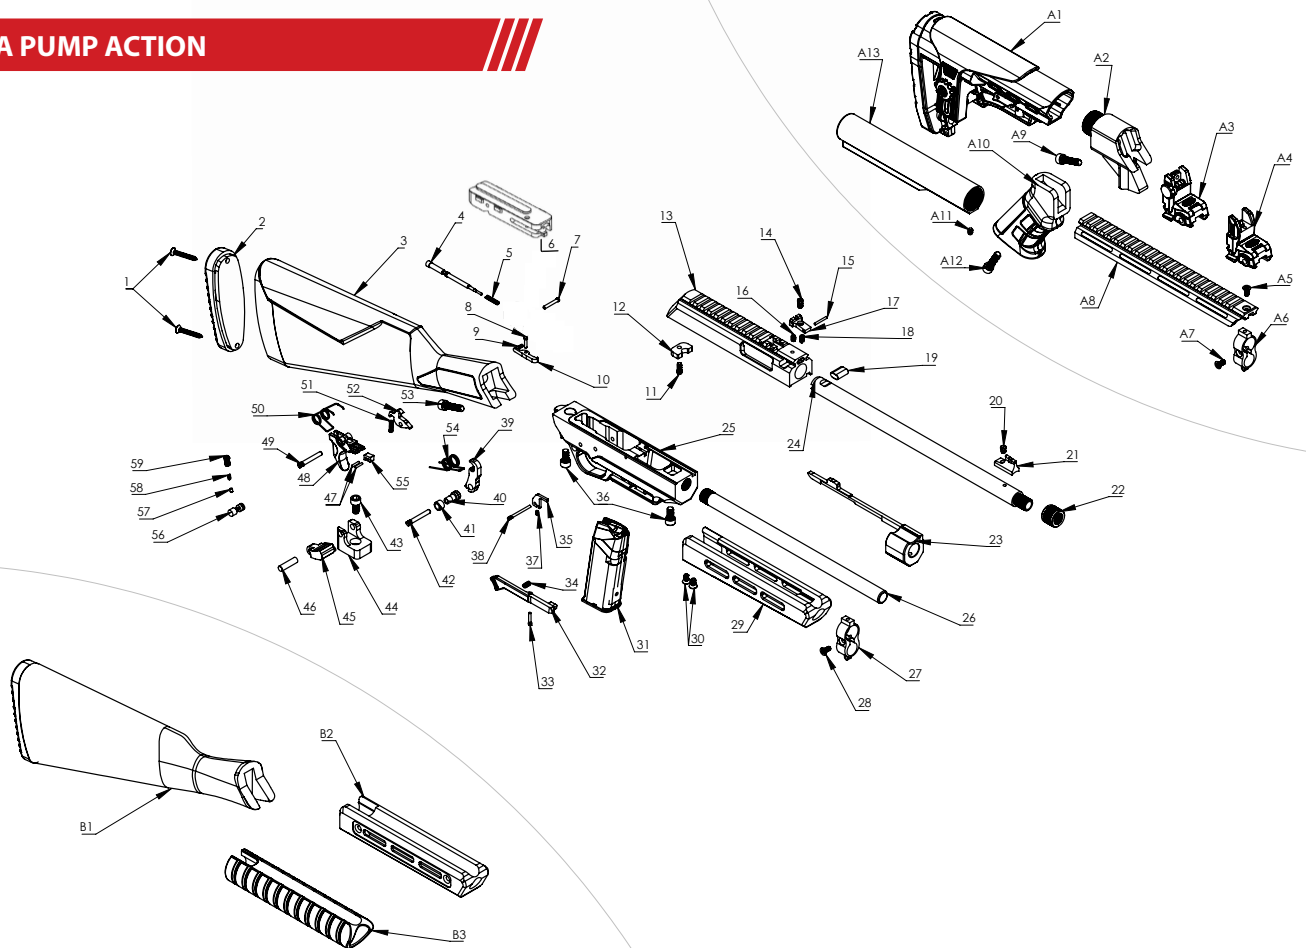

Warranty Certificate

Derya warranty covers its rifles and parts. We offer 2 years Warranty on our products for their intended purpose. As with any product, abuse, gunsmithing by an unqualified person and normal wear and tear are excluded. Additionally, if the rifle was modified and/or repaired by an unqualified gunsmith without permission from DERYA®, the warranty will be void.

DERYA® warrants that the enclosed rifle was originally manufactured free of defects in material, workmanship and mechanical function. DERYA® agrees to correct any defect in the rifle for the original purchaser/importer by repair, adjustment or replacement, at DERYA's® option, with the same or comparable quality components (or by replacing the rifles at DERYA's® option); provided, however, that the rifle is returned unloaded and the freight prepaid.

This warranty is null and void if the rifle has been misused, damaged (by accident or otherwise), fired with hand loaded, reloaded or improper ammunition, fired with an obstruction in the barrel, damaged through failure to provide reasonable and necessary maintenance as described in the manual accompanying the rifle, or if unauthorized repair or any alteration, including of a cosmetic nature, has been performed on the rifle.

Subject to the foregoing, this warranty confers the right to have the covered rifle or its parts repaired, adjusted or replaced exclusively upon the original purchaser, which right is not transferable to any other person. No implied warranties of any kind are made herein and this warranty does not apply to any accessory items attached or appurtenant to the rifle.

In no event shall DERYA® be liable for any incidental or consequential damages arising from or in connection with this warranty, In the event warranty service is needed, contact the dealer you purchased the rifle from; or the importer/distributor of your country; or DERYA® customer service by mailing to support@deryaarms.com.



**“HAVE YOU SEEN ANY
OTHER TM22 MODELS?”**



DERYA STORE



SOCIAL MEDIA



Derya Silah San.Ltd.
O.S.B. 41959 Sk.
No:24 42700
Konya/Turkey



+90 332 514 8118



support@deryaarms.com



www.deryaarms.com